



Thank you for your order,

A quick note on your first experience configuring the Über WAP.

***NOTE**

- DHCP by default is **not** enabled so plugging into it will not give you an IP address.
- You will need to change **your** IP address into the 192.168.2.xyz // 255.255.255.0 subnet to first configure the device.
- Allow 30 sec for the device to boot completely before attempting to log into the GUI
- Using a web browser enter 192.168.2.1
- The default username and password is **admin//1234**
- The rest is rather intuitive
- remember when making changes, to make them stick click apply and apply again. This will apply the changes and save them too. Clicking apply and continue will allow you to continue making changes through the different menus and will not firmly save them till you click apply and apply. The unit will then reboot and load with the new settings.

If you have any issues give us a call